
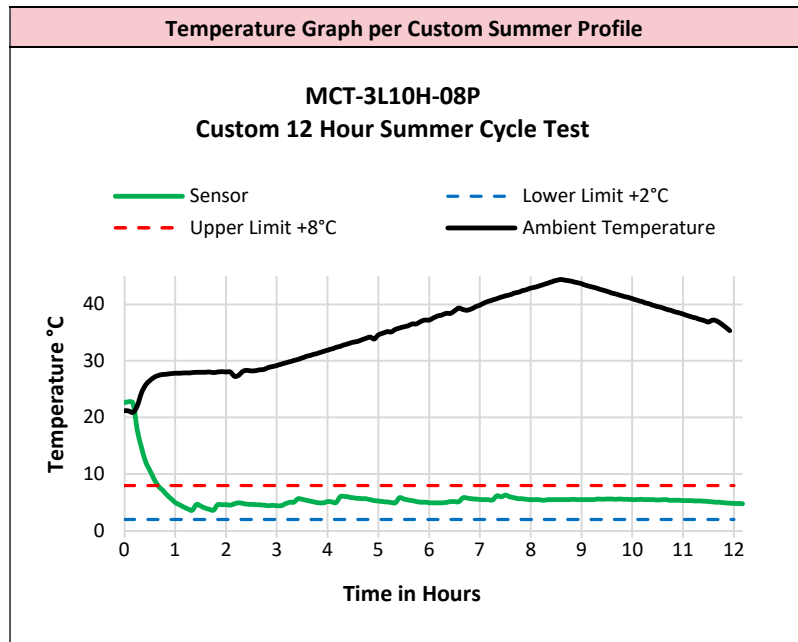


Refrigerated Universal 3Ltr Medical Courier Tote

Model Number: MCT-3L10H-08P

Description: Multi-use Medical Courier Tote with 12" x 11" x 10.5" external dimensions and 3 Liter payload volume. Validated to keep payload at +2°C to +8°C for 10 hours in Summer per custom cycle with 15 second opening every 15 minutes.

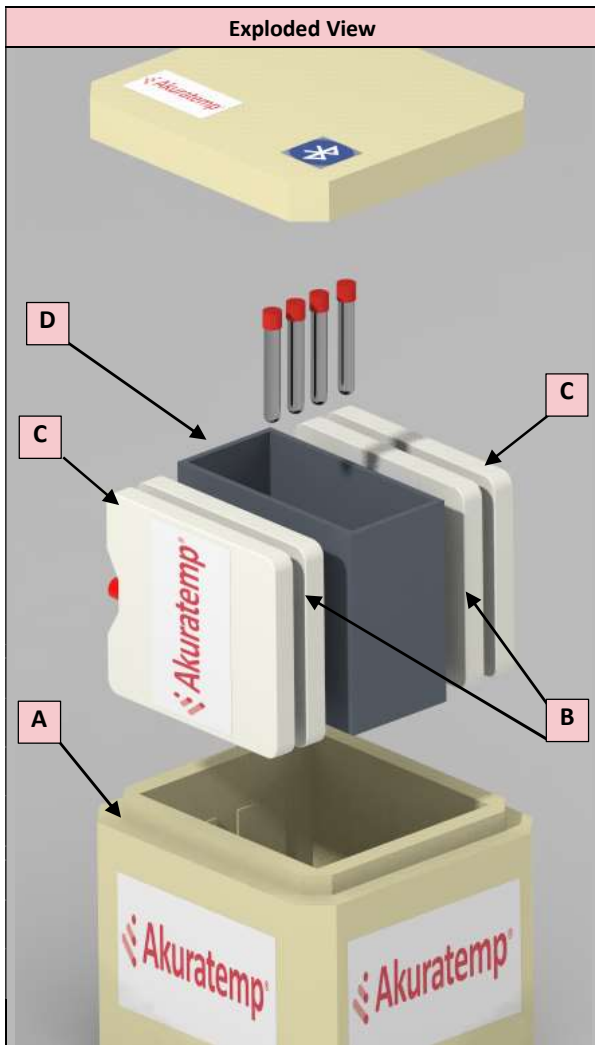

Holdover Time per Custom Summer Profile			
Test	Open	Payload Temperature	Holdover Time
Summer Cycle	15 sec per 15 min	Below +8°C	10 hours
Winter Cycle	-	-	-

Product Specifications			
External Dimensions	12" x 11" x 10.5"	Payload Dimensions	7" x 7" x 3"
Payload Volume	3 Liters	Actual Weight	9 lbs.
		Dimensional Weight	11 lbs.
Pallet Quantity	84	Estimated Number of Uses	-

#	Bill of Materials		Weight	Qty	Conditioning Instructions
A	ML1212110	PUF Shipper	1.75 lbs.	1	Store at room temperature of +20°C to +25°C for at least 24 hours prior to use.
B	OM05P-8X7-500-AT	PCM Cool Pack	1.45 lbs.	2	Condition in a refrigerator operating at +5°C for 48 hours prior to use.
C	HS01P-8X7-600-AT	PCM Cold Pack	1.65 lbs.	2	Condition in a freezer operating at -15°C for 48 hours prior to use.
D	RGE 20 SPF/DPF	Foam Insert	0.10 lbs.	1	Store at room temperature of +20°C to +25°C for at least 24 hours prior to use.
E	S-22636	12X11X11" Outer Box	0.80 lbs.	1	