


CRT Universal 3Ltr Medical Courier Tote


Model Number: MCT-3L10H-25P

Description: Multi-use Medical Courier Tote with 12" x 11" x 10.5" external dimensions and 3 Liter payload volume. Validated to keep payload at +15°C to +25°C for 10 hours in Summer per custom cycle with 15 second opening every 15 minutes.

Exploded View

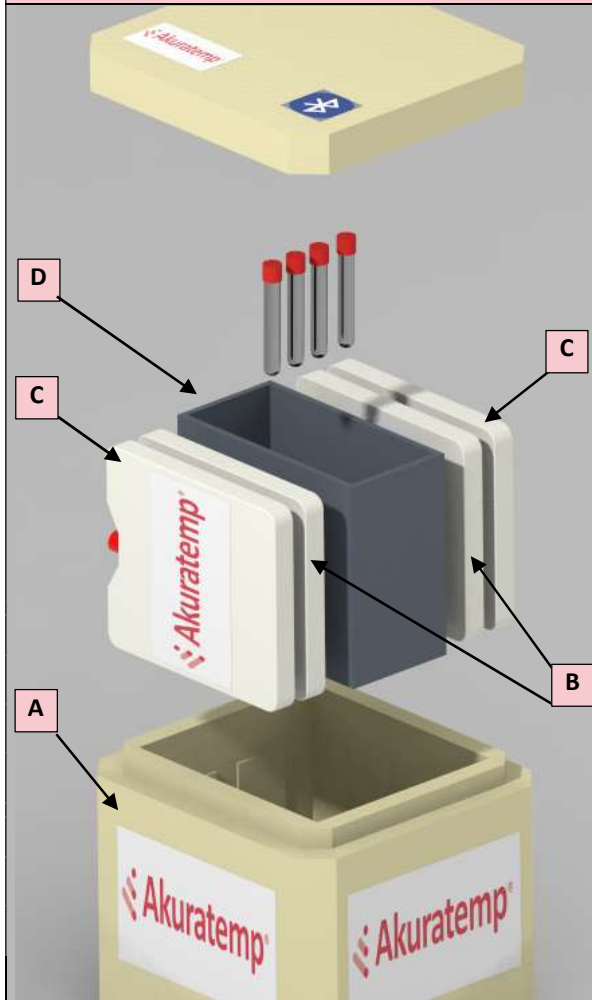

Temperature Graph per Custom Summer Profile

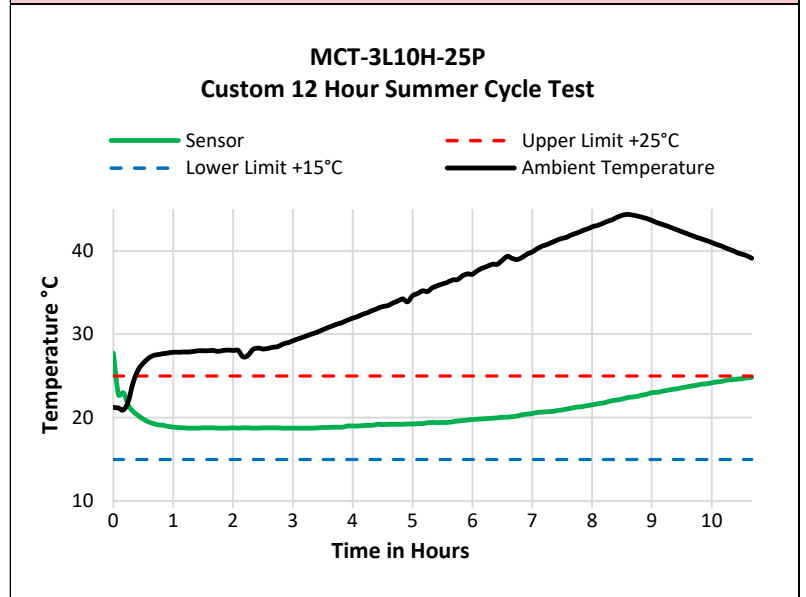

Holdover Time per Custom Summer Profile

Test	Open	Payload Temperature	Holdover Time
Summer Cycle	15 sec per 15 min	Below +25°C	10 hours
Winter Cycle	-	-	-

Product Specifications

External Dimensions	12" x 11" x 10.5"	Payload Dimensions	7" x 7" x 3"
Payload Volume	3 Liters	Actual Weight	9 lbs.
		Dimensional Weight	11 lbs.
Pallet Quantity	84	Estimated Number of Uses	-

#	Bill of Materials		Weight	Qty	Conditioning Instructions
A	ML1212110	PUF Shipper	1.75 lbs.	1	Store at room temperature of +20°C to +25°C for at least 24 hours prior to use.
B	OM18P-8X7-500-AT	PCM CRT Pack	1.45 lbs.	2	
C	HS01P-8X7-600-AT	PCM Cold Pack	1.65 lbs.	2	
D	RGE 20 SPF/DPF	Foam Insert	0.10 lbs.	1	
E	S-22636	12X11X11" Outer Box	0.80 lbs.	1	