


PRODUCT DATA SHEET

Frozen (-20C) Universal 8Ltr Parcel Shipper


Model Number: ATS9M-8L24H-20N

Description: Multi-use Parcel Shipper with 15" x 15" x 15" external dimensions and 8 Liter payload volume. Validated per ISTA 7D testing to keep payload frozen below -20°C for 24 hours in Summer.

Exploded View

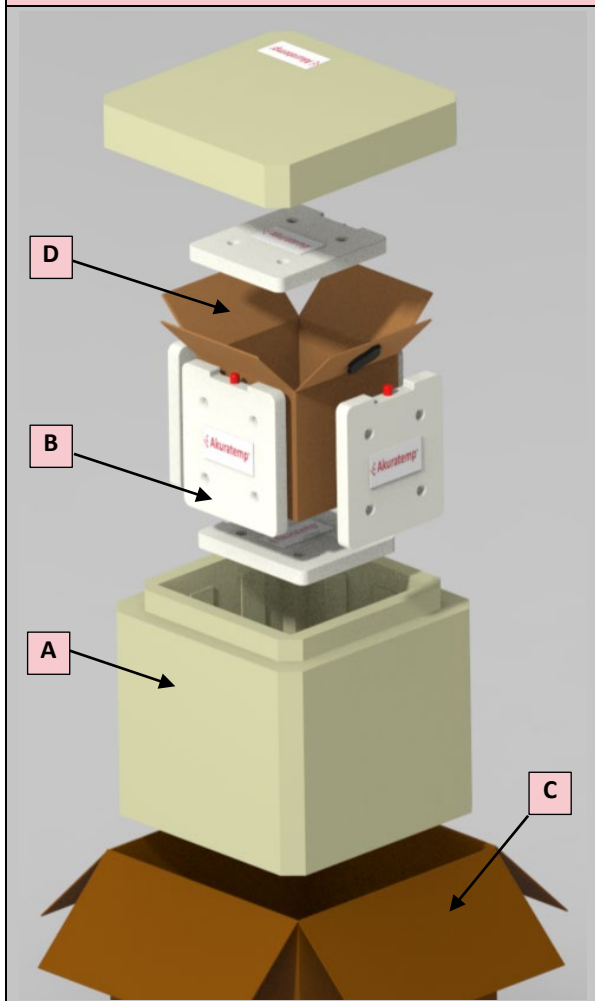

Temperature Graph per ISTA 7D

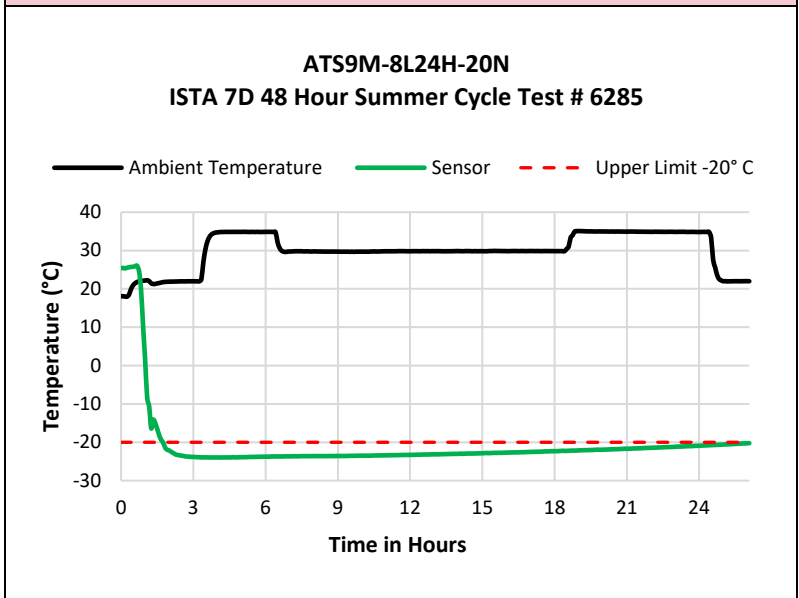

Holdover Time per ISTA 7D

Test	Payload Temperature	Holdover Time
Summer Cycle	Below -20°C	24 hours
Winter Cycle	-	-

Product Specifications

External Dimensions	15.5" x 15.5" x 15.75"	Payload Dimensions	8" x 8" x 8"
Payload Volume	8 Liters	Actual Weight	18 lbs
		Dimensional Weight	26 lbs
Pallet Quantity	30	Akurasense Compatible	Yes
		Warranty	12 Months

#	Bill of Materials		Weight	Qty	Conditioning Instructions
A	ML16151515/D	PUF Shipper	4.0 lbs	1	Store at room temperature of +20°C to +25°C for at least 24 hours prior to use.
B	HS26N-8X7-750	PCM Ice Pack	1.9 lbs	6	Condition in a freezer operating at -35°C or below for at least 48 hours and until frozen solid prior to use.
C	S-4318	15" Cube Outer Box	1.6 lbs	1	
D	S-18336	8" Cube Payload Box	0.4 lbs	1	Store at room temperature of +20°C to +25°C for at least 24 hours prior to use.