
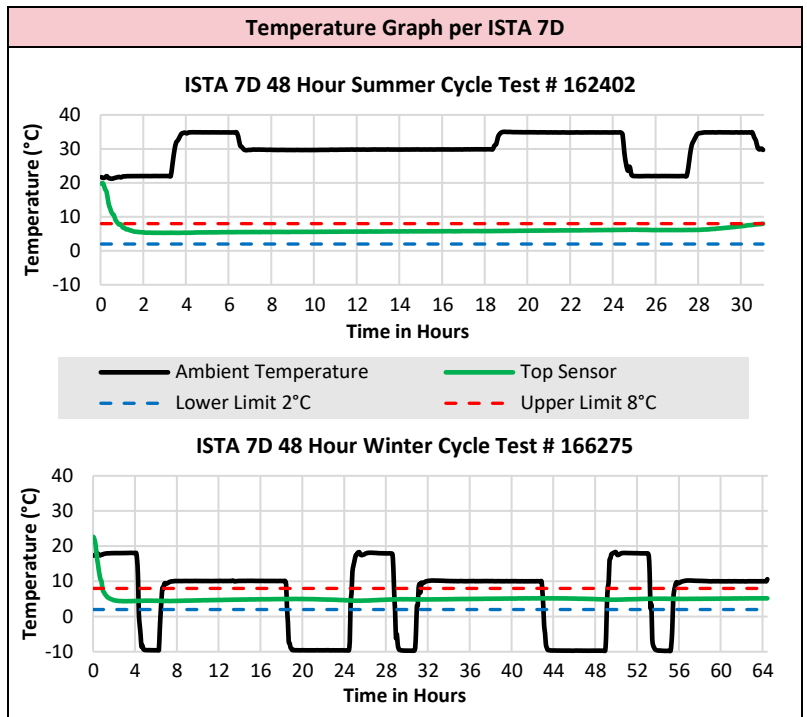


PRODUCT DATA SHEET

Refrigerated Universal 8Ltr Parcel Shipper

Model Number: ATS9M-8L30H-08P

Description: Multi-use Parcel Shipper with 15" x 15" x 15" external dimensions and 8 Liter payload volume. Validated per ISTA 7D testing to keep payload between +2°C and +8°C for 30 hours in Summer and for over 64 hours in Winter.

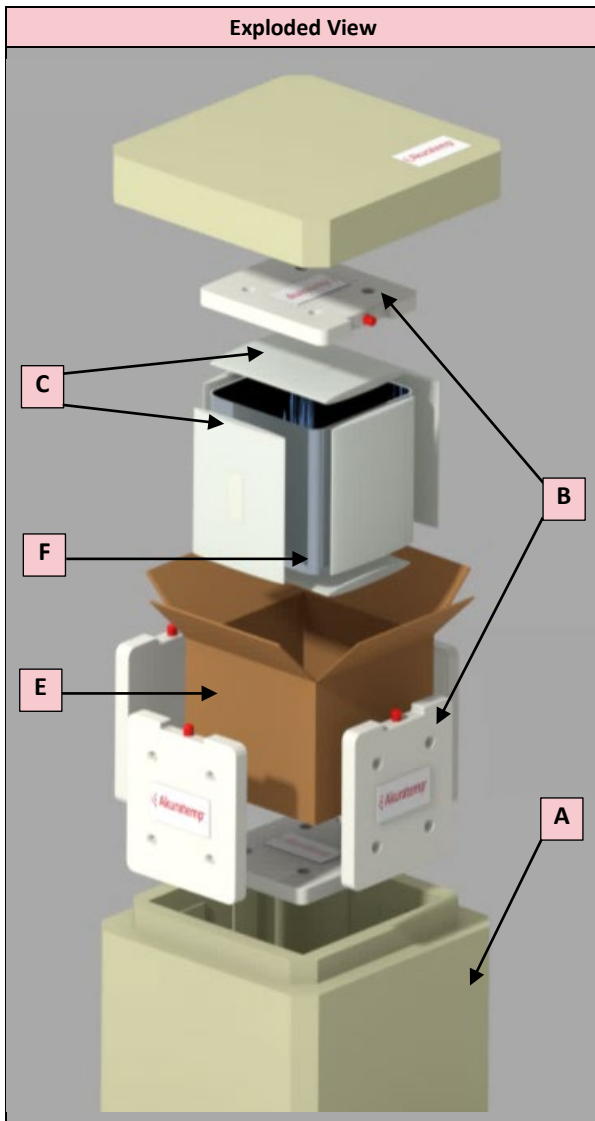

Holdover Time per ISTA 7D		
Test	Payload Temperature	Holdover Time
Summer Cycle	Below +8°C	30 hours
Winter Cycle	Above +2°C	64+ hours

Product Specifications					
External Dimensions	15.5" x 15.5" x 15.75"	Payload Dimensions	8" x 8" x 8"		
Payload Volume	8 Liters	Actual Weight	18 lbs	Dimensional Weight	26 lbs
Pallet Quantity	30	Akurasense Compatible	Yes	Warranty	12 Months

#	Bill of Materials	Weight	Qty	Conditioning Instructions
A	ML16151515/D PUF Shipper	4.0 lbs	1	Store at room temperature of +20°C to +25°C for at least 24 hours prior to use.
B	OM05P-8X7-500 PCM Cool Pack	1.4 lbs	6	
C	OM05P-8X6-100V PCM Buffer Cool Pack	0.25 lbs	6	
D	S-4318 15" Cube Outer Box	1.6 lbs	1	
E	S-18336 8" Cube Payload Box	0.4 lbs	1	
F	S-15221 Insulated Box Liner	1.8 lbs	1	