
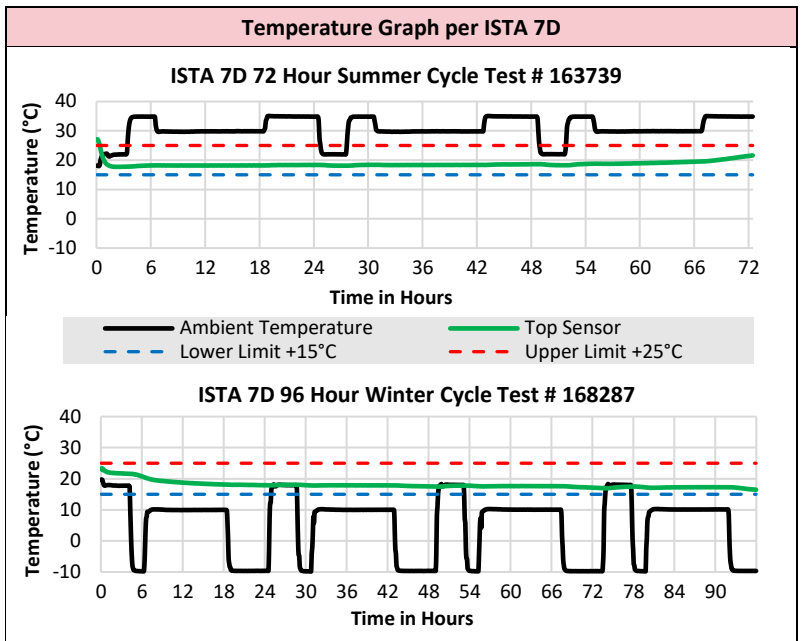


PRODUCT DATA SHEET

CRT Universal 8Ltr Parcel Shipper

Model Number: ATS9M-8L72H-25P

Description: Multi-use Parcel Shipper with 15" x 15" x 15" external dimensions and 8 Liter payload volume. Validated per ISTA 7D testing to keep payload in the CRT range of +15°C to +25°C for over 72 hours in Summer and Winter.

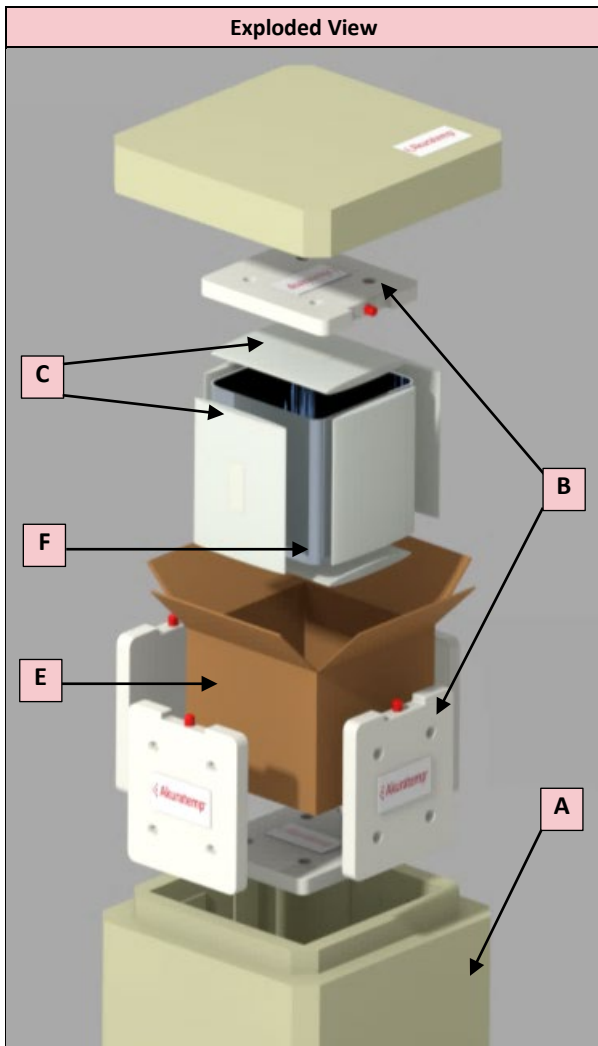

Holdover Time per ISTA 7D		
Test	Payload Temperature	Holdover Time
Summer Cycle	Below +25°C	72+ hours
Winter Cycle	Above +15°C	72+ hours

Product Specifications					
External Dimensions	15.5" x 15.5" x 15.75"	Payload Dimensions	8" x 8" x 8"		
Payload Volume	8 Liters	Actual Weight	18 lbs	Dimensional Weight	26 lbs
Pallet Quantity	30	Akurasense Compatible	Yes	Warranty	12 Months

#	Bill of Materials		Weight	Qty	Conditioning Instructions
A	ML16151515/D	PUF Shipper	4.0 lbs	1	Store at room temperature of +20°C to +25°C for at least 24 hours prior to use.
B	OM18P-8X7-500	PCM CRT Pack	1.4 lbs	6	For Summer shipping: Condition in a refrigerator operating at +2°C to +8°C for at least 48 hours prior to use. For Winter shipping: Condition at room temperature of +20°C to +25°C for at least 48 hours prior to use.
C	OM18P-8X6-100V	PCM Buffer CRT Pack	0.25 lbs	6	Condition at room temperature of +20°C to +25°C for at least 24 hours prior to use.
D	S-4318	15" Cube Outer Box	1.6 lbs	1	Store at room temperature of +20°C to +25°C for at least 24 hours prior to use.
E	S-18336	8" Cube Payload Box	0.4 lbs	1	
F	S-15221	Insulated Box Liner	1.8 lbs	1	